

SDI/HDMI SMART CAPTURE BOX

Quick Start Guide V2.0

Product definition

No.		
1	5V/2A	
2	HDMI Input	HDMI 1.4 UP TO 4K30hz
3	AV	AV/L/R, CVBS
4	HDMI Output	Output up to 1080 60hz
5	Micro usb2.0 (USB to PC)	Pc Mode
6	USB2.0	U disk or hard disk (32G or 2TB)
7	Line Out 3.5mm	Headphones, speakers, etc.
8	Mic In 3.5mm	Microphone, audio input
9	Infrared reception	
10	SDI	3G/HD/SD-SDI
11	USB LED	
12	SDI/HDMI/AV	SDI/HDMI/AV LED
13	1080、720	1080/720 LED
14	Power LED	
15	Resolution switching 720/1080	
16	SDI/HDMI/AV Source switching	
17	Record/Stop	



HDMI / SDI Input Resolution:

HDMI Input:	3840x2160 (30p), 2560x1440 (60p) 640x480——1920x1080(60P)
HDMI Output:	1920x1080 (60p), 1280x720 (60p)
Recording:	1920x1080 (30p), 1280x720 (60p)
PC software Recording:	1920x1080 (30p), 1280x720 (60p), 1280x720 (30p), 640x480 (60p), 720x480 (60p), 720x576 (50p)



PC MODE:


- 1. The first step is to install the software on the CD
- 2. The serial number is behind the disc package
- 3. This product can be used in addition to our software, you can also use OBS, Xsplit, etc.
- 4. When using the PC function, the storage device is a computer (not stored in the U disk or hard disk)



USB CABLE TO PC

LED description:

LED	
Power (Red Light)	
USB (Green Light)	USB storage device
USB(no Light)	Cannot identify device
1080P(Green Light)	Flashing indicates recording
720P (Green Light)	Flashing indicates recording
AV(Green Light)	AV
HDMI(Green Light)	HDMI
SDI(Green Light)	SDI

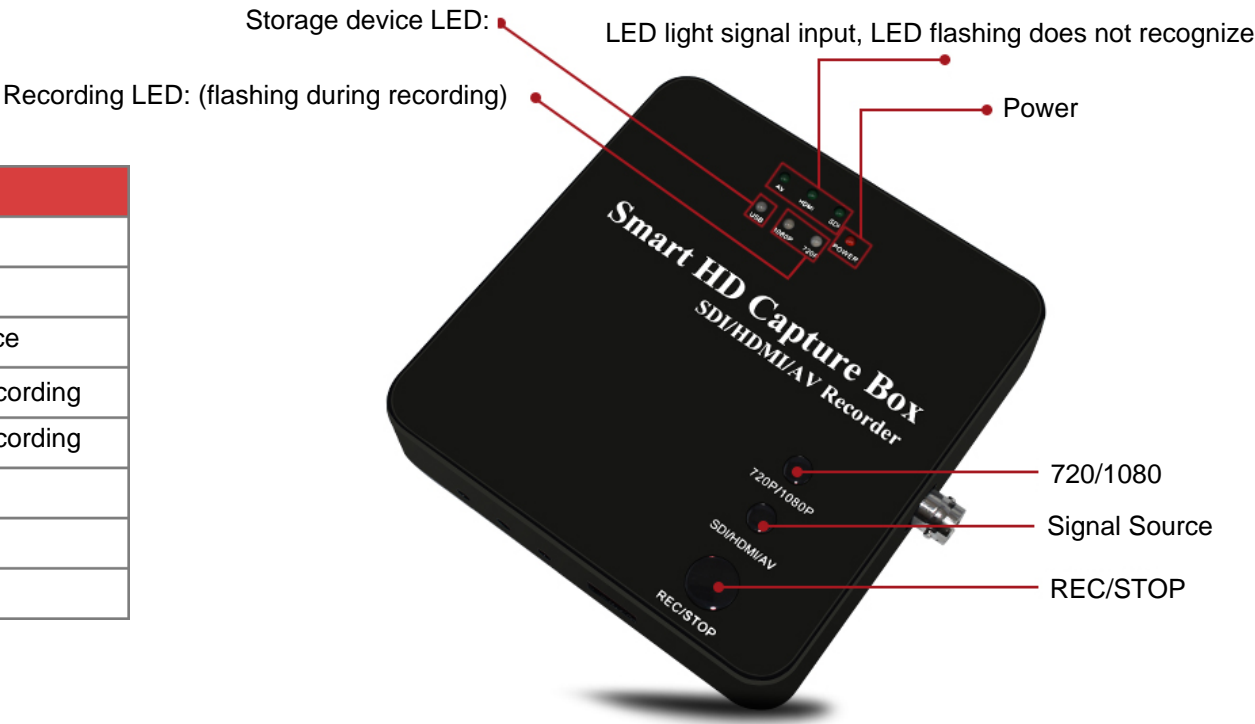

External storage device considerations:

- 1. U disk maximum 32G (FAT32 format)
- 2. Maximum 2TB hard disk (If more than 1TB please format NTFS or MBR)

Other notes:

- 1. Please use the "TIME" button for the first time to set the system time
- 2. After the recording is complete, wait until the light off and then remove the storage device
- 3. Bitrate 3 functions, Loop recording, limited recording, unlimited recording.
Loop recording: Identify U disk or hard disk 12 seconds,suggest NTFS format
Limited Recording: Identify U disk or hard disk for 3 seconds, suggest FAT32 format
Umlimited recording: U disk or hard disk 3 seconds, suggest NTFS format

If you have any questions please contact customer service.